

Thermocouple Replacement

This thermocouple replaces all previous types. You may need to enlarge the hole the thermocouple is inserted if you had a different style, or you may need to use fiber to fill the opening if this new thermocouple is smaller than the one you had previously installed.

Thermocouple installation:

Remove the four screws that attach the electrical box, with the electronic controller in it, to the kiln. Strip the yellow and red wires 3/8 of an inch that are attached to the thermocouple. Disconnect defective thermocouple and insert the new thermocouple through the opening in the kiln brick. Set thermocouple approximately 1" inside kiln firing chamber. Attach yellow wire to the positive connection on the electronic board and the red wire to the negative connection.

