

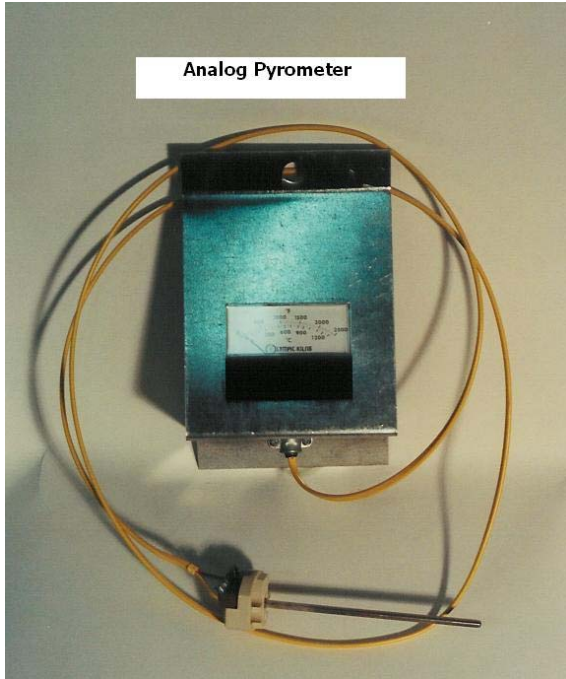


# PYROMETER INSTALLATION

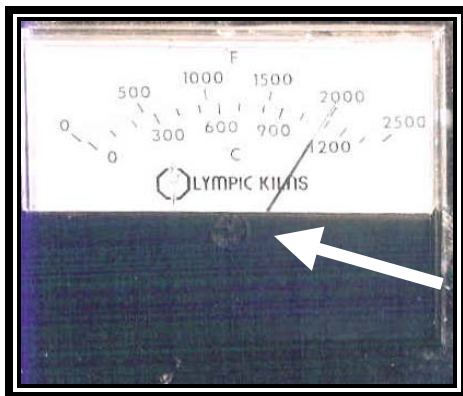

Wall Mount Pyrometer – Drill hole  $\frac{1}{4}$ " through exposed brick of kiln and insert thermocouple. The thermocouple only needs to be inserted into the kiln about  $1\frac{1}{2}$ ".

Hang wall mount pyrometer away from the kiln to prevent damage to the instrument. The lead wire from the instrument to the thermocouple is 6 feet.

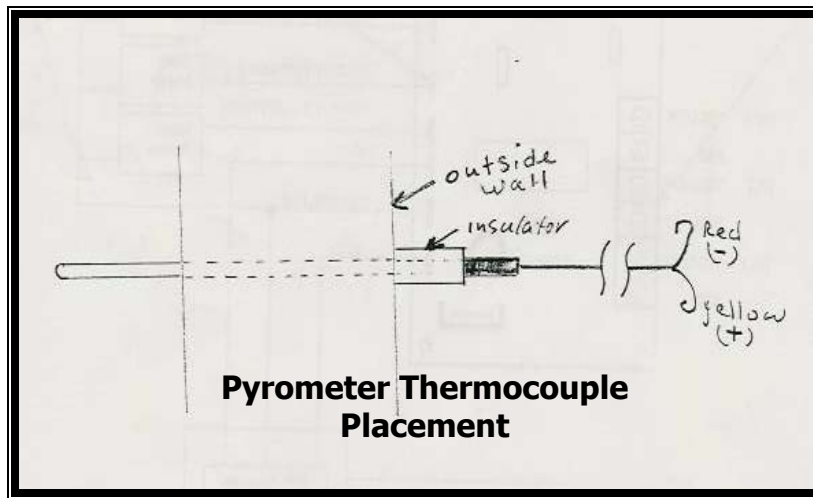

If calibration of the pyrometer is required, adjust the set screw located on the plate of the instrument with a screwdriver.

**Set Screw**